

# Alta

## Operation Manual

PushGo™

Contact Technical Support Team

✉ support@purelinkav.com

☎ (201) 488-3232 Ext.2992


### PushGo™ Alta with CFE Display and PTZ Camera

#### Turn on The PushGo™ System



Press the PushGo button will turn on:

- The PureLink 4x1 HDMI switcher (MVS-41)
- Turn on the Display
- Turn on the Camera
- Set the Volume to default level
- Change the Control Panel page to the main operations page

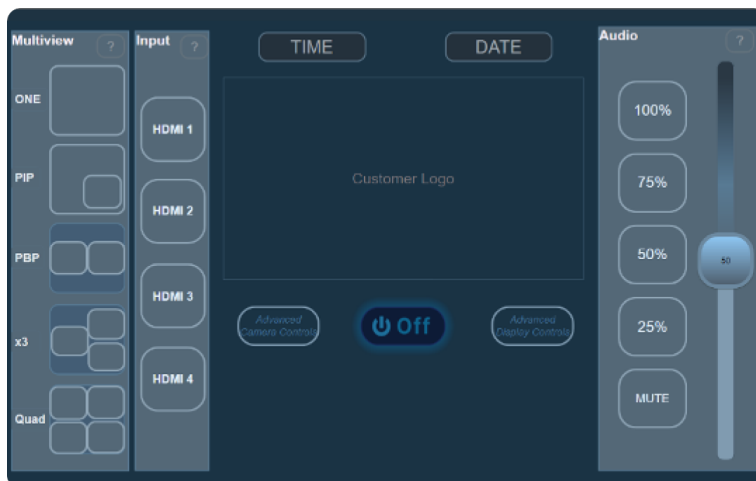

# Display View and Source Selection

## Flow

### 1. Select Display Layout:

Decide which source layout you would like on your display, then press the source zone you want to assign a source to:

- For example: if you want to set the input source for the PIP window of the PIP layout, press the PIP window:



*Source zones are the areas where the input will be displayed on the screen*

## 2. Select source:

If you have selected a Multiview layout, continue to select zones and assign sources as you prefer.


- Note: The last selected layout zone will continue to be active, so any further input changes will affect that layout and zone, unless you select a different zone or layout and zone.



## Set the name of an input source button


You may choose to change the names of the inputs displayed on the input buttons.

**Press the Input label of the Input section:**

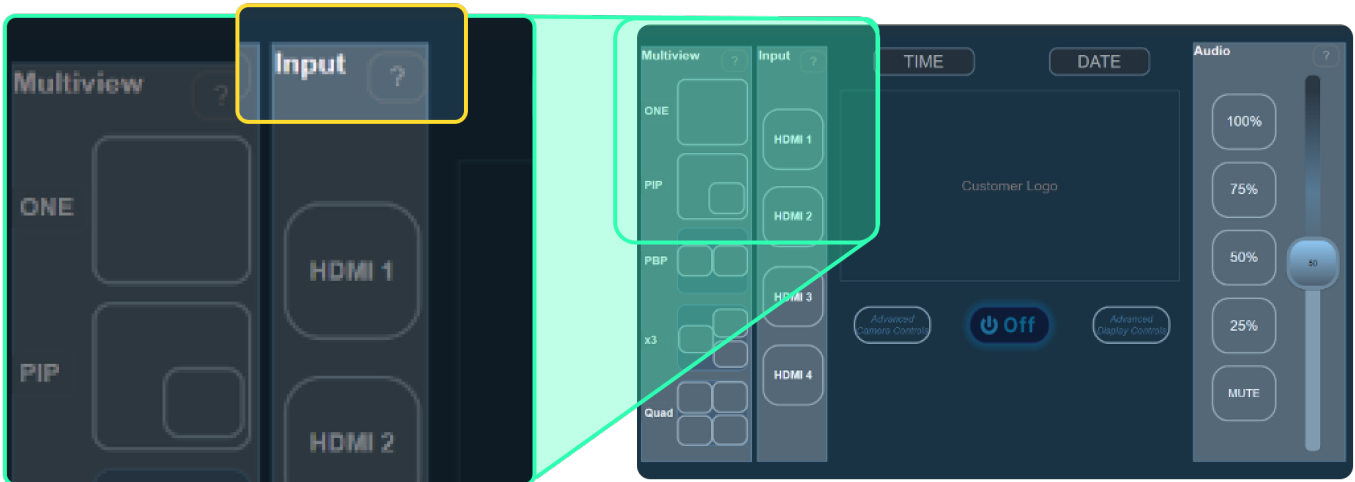


A popup window will appear. Select the button you want to change the name to.

Once you have typed in the name you want, hit change. You can continue to change the names of the remaining buttons in this popup window:

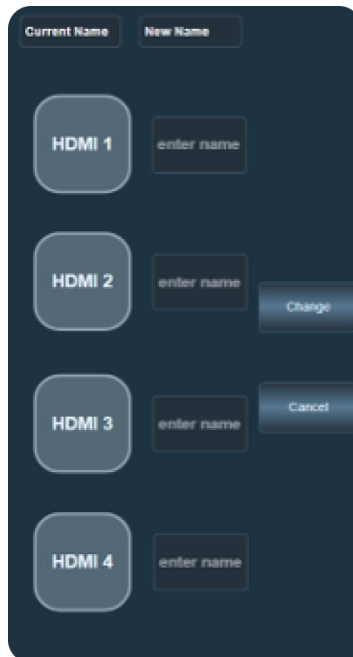


## Audio Volume

The audio volume section contains 5 presets and a slider; these control the audio volume of the video switcher.

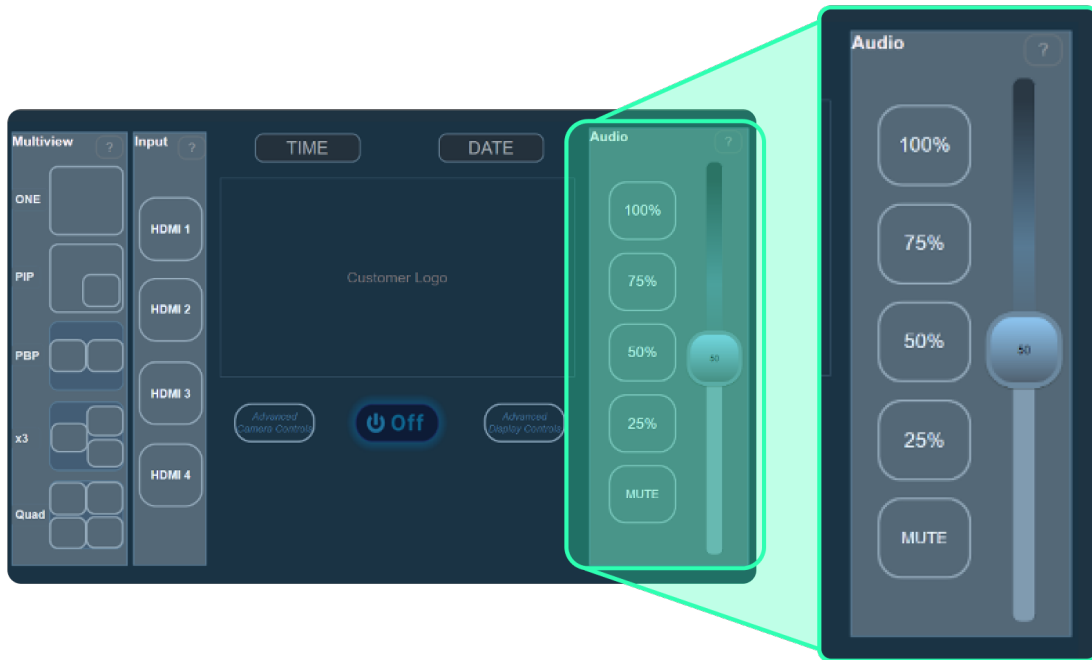


If you find that you cannot achieve the volume level you desire with these controls alone, you can adjust your display volume. These controls are available from the Advanced button that will pop up a window with display controls.

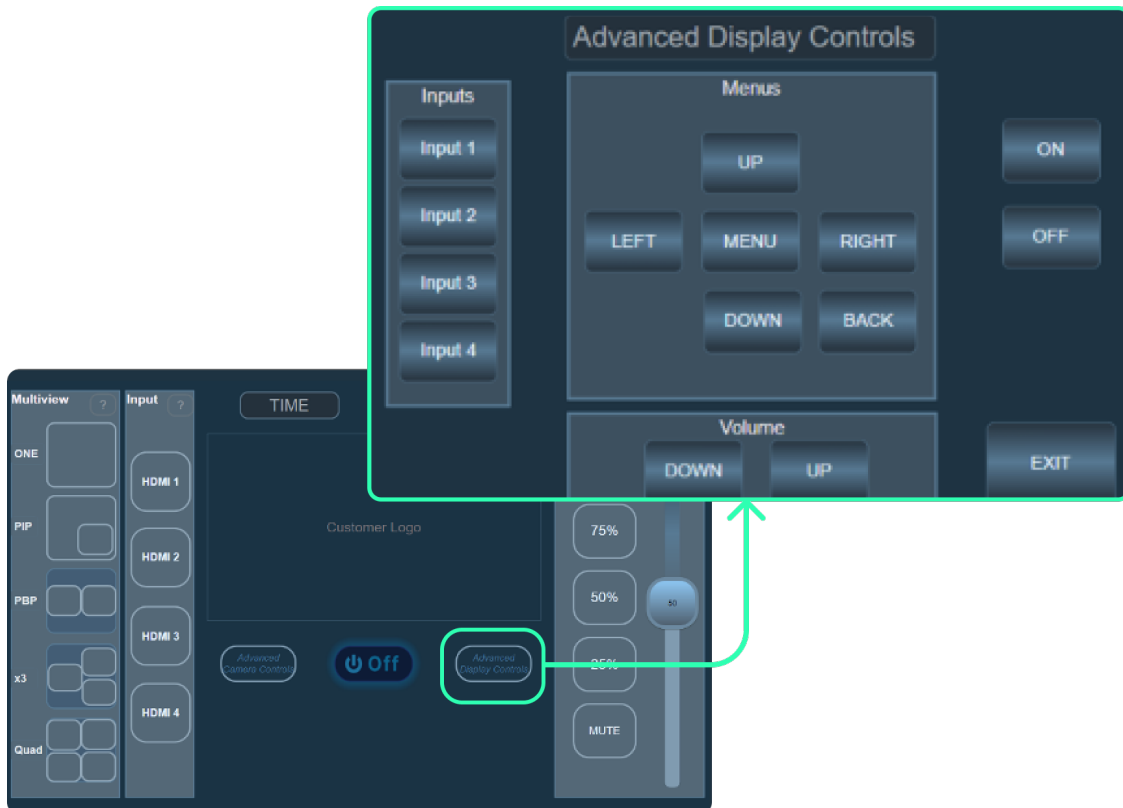

## Camera Mode

For your PTZ camera, you can choose to access the Advanced Camera Controls to manually set the Pan, Tilt, and Zoom of the camera.

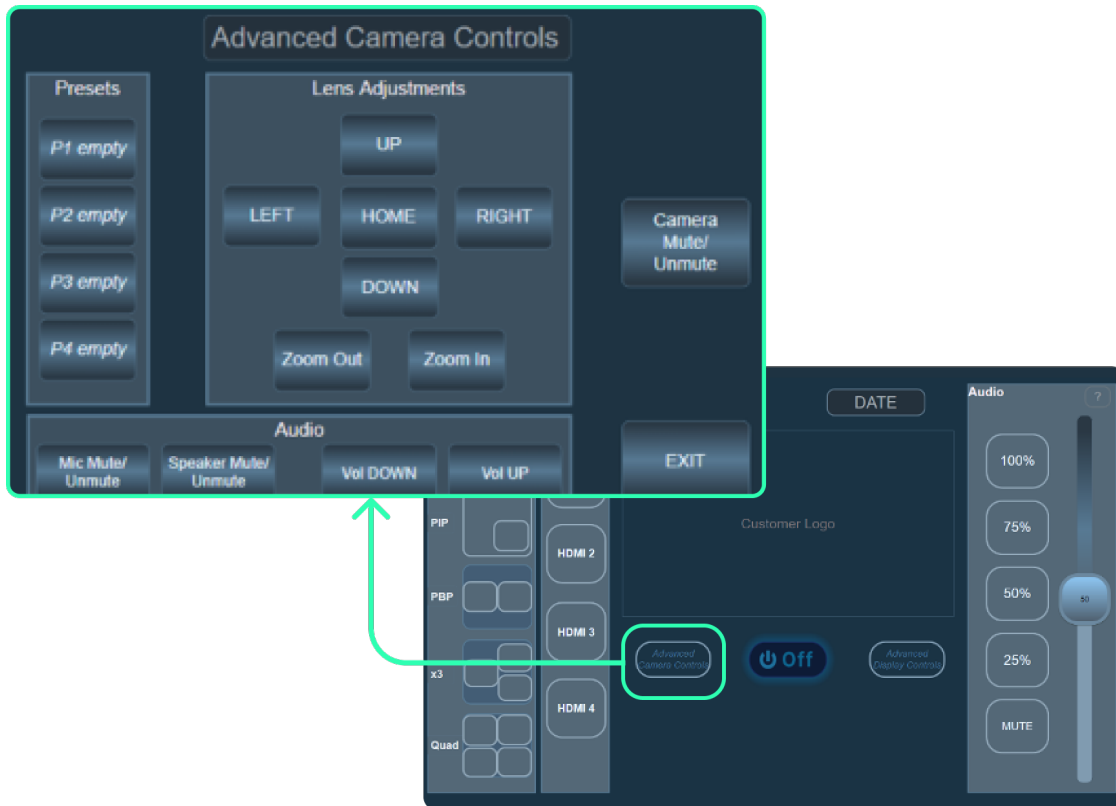

## Camera Presets

Camera presets are useful when tracking modes are off. Presets allow you to create predefined pan, tilt, and zoom framing for reuse.

To program a preset, enter the Advanced Camera Controls, adjust the pan, tilt, zoom, and press and hold the preset button you want to store to until a popup menu appears that confirms your preset is saved, and allows you to custom name that preset.



## Turning system off

Hold the Off button for 5 seconds. The system will shut down any devices that have a power off option. The control panel will return to the PushGo startup screen.

